

## Anybus Edge Gateway

Exercise: Connecting the Gateway to the HMS Hub

## **SOLUTION SHEET**

SCM-1202-135 1.1 en-US ENGLISH



## 1 Connecting the Gateway to the HMS Hub

This exercise explains how to make a connection from the Anybus Edge Gateway to the HMS Hub. To achieve this, you first need an account on HMS Hub and secondly you need to connect the gateway to a project.

Go to www.hms-hub.com to register.

Welcome					
Not yet registered? As a HMS customer, you can	LOGIN				
here.	Username				
	Password				
11	Customer 💽				
REGISTER	SIGN IN				
FORGOT PASSWORD?					

After you have registered and confirmed the verification e-mail, you will receive an HMS Hub activation e-mail.

Log in to your HMS Hub account.

1. Create a project by clicking the plus sign (+).

MANAGE:	PROJECTS BILLING
SEARCH	Q
Create a project	Þ

2. Add the project details.

The name of the project must be unique, since it will be used in the project url. As an example, use the following notation: [company]-[city or department]-[specific machine]. In our case this would be hms-halmstad-soldering.

<	Create a project	
Name*	hms-halmstad-soldering	0
Description		
Service user*	HMS-DAK (Daniel Karl 🔻	8

3. To create the project, click **ORDER AND ACTIVATE WITH COSTS**. You will now see the project details, including the project address link.

MANAGE: PROJECTS	BILLING US	SER	
4	HIDE SIDEBAR	hms-halms	stad-soldering
SEARCH	Q	2	hms-halmstad-soldering
Create a project	+	Name	hms-halmstad-soldering
hms-halmstad-soldering	>	Project address	https://hms-halmstad- soldering.hms-hub.com
TestProi		Service user	HMS-DAK (Diel Karlsson, Daniel)
		Maximum limit for history storage	730 Days
		Info: Click the gateways.	e project address to set up

- 4. Click the project address link to enter the project. Log in using your HMS Hub account credentials.
- 5. Click on Activate gateway.

			no gateway available
,			
<b>ի</b> ս	<u>.</u>	<u>+</u>	<b>b</b>

- 6. Select your gateway type in the list.
- 7. Enter the MAC address of the gateway. The MAC address can be found on the side label, in the IP tool or in the gateway's internal web interface.
- 8. In Scope, add the name you want to use for the gateway, i.e DemoRig. The name must be unique within the project.

9. Set a user name and a password. This is for the secure communication between the gateway and the HMS Hub. You can automatically generate a strong password by clicking **Generate**.

MANAGE: GATEWAYS SURFACE	PROJECTS BILLING USER	
	Activate gateway	
SEARCH Q	< Act	ivate gateway
	Template data structure	Portal
	Connection*	Host hms-hub.com
	Anybus Edge Gateway	Project hms-halmstad-soldering
	MAC address* 003056501fe8	Scope* DemoRig
	Here you set the corresponding data structure on the	Description Project1
	HMS Hub. Please first choose your gateway from the list and enter the MAC address	Username* Link1
		Password*
		Repeat
		Generate f49q}XSb90[
	* This input field is mandatory.	ORDER AND ACTIVATE WITH COSTS

- 10. Click ORDER AND ACTIVATE WITH COSTS to continue.
- 11. Go back to the home page of the gateway, by entering the IP address of the gateway in the web browser, to set up the gateway to communicate with HMS Hub. From the home page, click on **Settings** and then select the Settings tab.



- 12. Click HMS-HUB.
- 13. Enter the same information as you did in HMS Hub.

Se	ttings			
🚷 Ev	ent Log Settings Export			
	General Network HMS-HUB PLC Variables Time Switches Messages I/O Modbus Client/Master Modbus Server/Slave OPC UA Server CODESYS Network Variables SNMP Manager Services COM Server	HMS-HUB Enable: Host: Project: Scope: User name: Password: Timeout: Keep-alive interval: Keep-alive timeout: Watchdog	✓ hms-hub.com hms-halmstad-soldering DemoRig Link1 	(10.600 s) (153600 s) (15255 s)
	MicroBrowser Update	Enable Watchdog: Watchdog timeout: OK Reload	1440	(301440 min.)

- 14. Press OK to save the information.
- 15. Reboot the gateway.
- 16. Verify the connection by observing the Hub LED. When it's solid green, the communication is OK.

This page intentionally left blank